


Apple Time Capsule MLVport forwarding

1. Set Static IP of iBaby monitor
 - a. Open iBaby App on iOS device
 - b. Click on Setup
 - c. Select Set Camera IP
 - d. Turn "On" Static IP

2. Access router, set Port forwarding

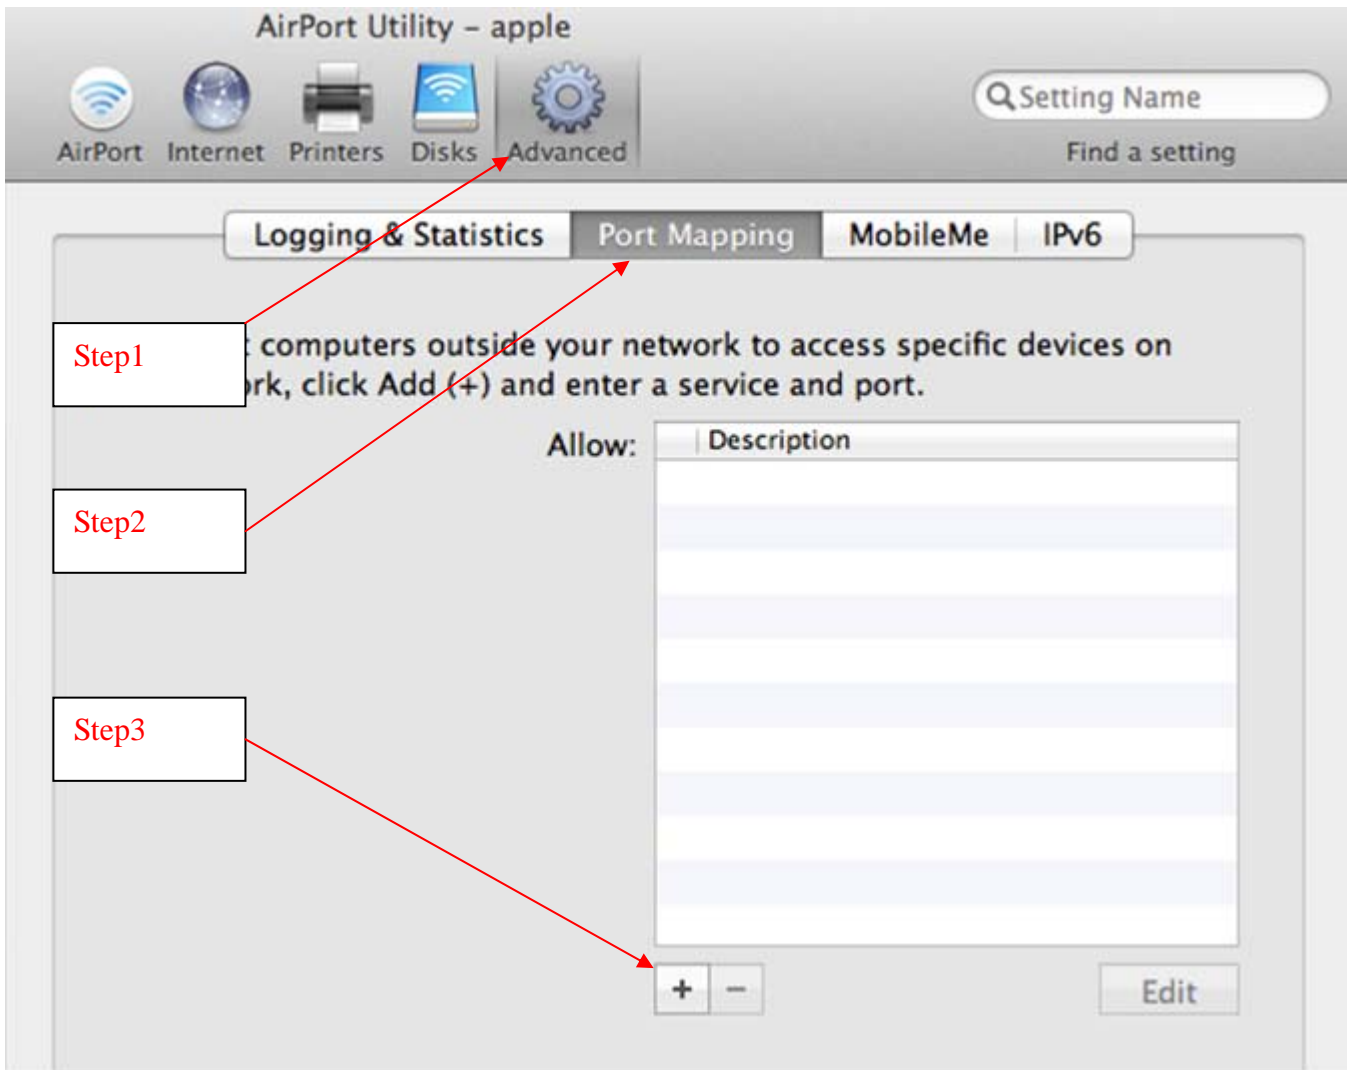

1. Enter PORT which listed on the iBaby monitor app of the iOS device under Setup>Camera Information>PORT

2. The Public TCP Port(s) is the same with the Public UDP Port(s)

3. Enter iBaby Monitor IP Address which listed on the iBaby monitor app of the iOS device under Setup>Camera Information> IP

4. The Private UCP Port(s) is the same with the Public UDP Port(s)

5. The Private TCP Port(s) is the same with the Public UDP Port(s)

Port Mapping Setup Assistant

Choose a service from the pop-up menu or enter the public address and ports that you want to map between.

Service: Choose a service

Public UDP Port(s): 14971

Public TCP Port(s): 14971

Private IP Address: 10.0.1.12

Private UDP Port(s): 14971

Private TCP Port(s): 14971

Buttons: Cancel, Go Back, Edit

iBaby



iBaby